

SCHEDULED MAINTENANCE**MAINTENANCE TABLE (EXCEPT CANADA)****Schedule 1 (Normal driving conditions)**

The vehicle is mainly operated where none of the “unique driving conditions” apply.

Chart symbols:

- I : Inspect and repair, clean, or replace if necessary.
- R : Replace
- L : Lubricate

Remarks:

- After 48 months or 60,000 miles {96,000 km}, continue to follow the described maintenance at the recommended intervals.
 - *1 This maintenance is required for all states except California. However, we recommend that it also be performed on California vehicles.
 - *2 This maintenance is recommended by Mazda. However, it is not necessary for emission warranty coverage or manufacturer recall liability.

Schedule 2 (Unique driving conditions)

- Repeated short-distance driving.
- Driving in dusty conditions.
- Driving with extended use of brakes.
- Driving in areas where road salt or other corrosive materials are used.
- Driving on rough or muddy roads.
- Extended periods of idling or low-speed operation.
- Driving for long prolonged periods in cold temperatures or extremely humid climates.

Chart symbols:

- I : Inspect and repair, clean, or replace if necessary. (Inspect, and if necessary replace Air cleaner element only)
- R : Replace
- L : Lubricate

Remarks:

- After 48 months or 60,000 miles {96,000 km}, continue to follow the described maintenance at the recommended intervals.
 - *1 This maintenance is required for all states except California. However, we recommend that it also be performed on California vehicles.
 - *2 This maintenance is recommended by Mazda. However, it is not necessary for emission warranty coverage or manufacturer recall liability.

Schedule 1 (Normal driving conditions)

Maintenance Interval	Number of months or miles {kilometers}, whichever comes first									
	Months	6	12	18	24	30	36	42	48	
	× 1000	Kilometers	12	24	36	48	60	72	84	96
Maintenance Item		Miles	7.5	15	22.5	30	37.5	45	52.5	60

Engine

Engine oil	R	R	R	R	R	R	R	R	R	
Oil filter	R	R	R	R	R	R	R	R	R	
Tension of all drive belts				I					I	
Engine timing belt	Replace every 60,000 miles {96,000 km}									
Engine timing belt (California)	* ² Inspect at 60,000 miles {96,000 km}, and again at 90,000 miles {144,000 km}									
	Replace every 105,000 miles {168,000 km}									
Hose and tube for emission										I* ²

Air cleaner

Air cleaner element					R					R
---------------------	--	--	--	--	---	--	--	--	--	---

Ignition system

Spark plugs					R					R
-------------	--	--	--	--	---	--	--	--	--	---

Fuel system

Idle speed* ²					I* ²					I* ¹
Fuel filter										R* ¹
Fuel lines and hoses					I* ²					I* ¹
Fuel hose (California)	Inspect every 105,000 miles {168,000 km}									

Cooling system

Cooling system					I					I
Engine coolant	Replace at first 45,000 miles {72,000 km} or 36 months; after that, every 30,000 miles {48,000 km} or 24 months									

Chassis and body

Brake lines, hoses and connections					I					I
Disc brakes					I					I
Drum brakes					I					I
Steering operation and linkages					I					I
Front suspension ball joints					I					I
Drive shaft dust boots					I					I
Bolts and nuts on chassis and body					I					I
Exhaust system heat shield					I					I
All locks and hinges	L	L	L	L	L	L	L	L	L	L

Air conditioner system (if equipped)

Refrigerant		I			I			I		I
Compressor		I			I			I		I

Schedule 2 (Unique driving conditions)

Maintenance Interval	Number of months or miles {kilometers}, whichever comes first												
	Months	4	8	12	16	20	24	28	32	36	40	44	48
	× 1000	Kilometers	8	16	24	32	40	48	56	64	72	80	88
Maintenance Item		Miles	5	10	15	20	25	30	35	40	45	50	55

Engine

Engine oil	R	R	R	R	R	R	R	R	R	R	R	R	R
Engine oil (Puerto Rico)	Replace every 3,000 miles {4,800 km} or 3 months												
Oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R
Tension of all drive belts							I						I
Engine timing belt	Replace every 60,000 miles {96,000 km}												
Engine timing belt (California)	*2Inspect at 60,000 miles {96,000 km}, and again at 90,000 miles {144,000 km}												
	Replace every 105,000 miles {168,000 km}												
Hose and tube for emission													I*2

Air cleander

Air cleaner element			I*2			R				I*2			R
---------------------	--	--	-----	--	--	---	--	--	--	-----	--	--	---

Ignition system

Spark plugs						R							R
-------------	--	--	--	--	--	---	--	--	--	--	--	--	---

Cooling system

Cooling system						I							I
Engine coolant	Replace at first 45,000 miles {72,000 km} or 36 months; after that, every 30,000 miles {48,000 km} or 24 months												

Fuel system

Fuel filter													R*1
Fuel lines and hoses						I*2							I*1
Idle speed						I*2							I*1
Fuel hose (California)	Inspect every 105,000 miles {168,000 km}												

Chassis and body

Brake lines, hoses and connections							I						I
Drum brakes							I						I
Disc brakes			I				I			I			I
Steering operation and linkages							I						I
Front suspension ball joints							I						I
Drive shaft dust boots							I						I
Bolts and nuts on chassis and body			I				I			I			I
Exhaust system heat shield							I						I
All locks and hinges	L	L	L	L	L	L	L	L	L	L	L	L	L

Air conditioner system (if equipped)

Refrigerant			I				I			I			I
Compressor			I				I			I			I

MAINTENANCE TABLE (CANADA)**Chart symbols:**

- I : Inspect and repair, clean, or replace if necessary. (Inspect, and if necessary replace ... Air cleaner element only)
- R : Replace
- L : Lubricate
- Rt : Rotation (tires)

Remarks:

- After 60 months or 60,000 miles {96,000 km}, continue to follow the described maintenance at the recommended intervals.
 - *1: Replacement of the timing belt is required every 60,000 miles {96,000 km}. Failure to replace this belt may result in damage to the engine.
 - *2: This maintenance is recommended by Mazda. However, it is not necessary for emission warranty coverage or manufacturer recall liability.
 - *3: This maintenance operation is recommended by Mazda.

SCHEDULED MAINTENANCE



Maintenance Interval Maintenance Item	Number of months or miles {kilometers}, whichever comes first												
	Months	5	10	15	20	25	30	35	40	45	50	55	60
	× 1000 Kilometers	8	16	24	32	40	48	56	64	72	80	88	96
	Miles	5	10	15	20	25	30	35	40	45	50	55	60

Engine

Engine oil	R	R	R	R	R	R	R	R	R	R	R	R	R
Oil filter	R	R	R	R	R	R	R	R	R	R	R	R	R
Tension of all drive belts	I	I	I	I	I	I	I	I	I	I	I	I	I
Engine timing belt*1													R

Air cleaner

Air cleaner element			I				R			I			R
---------------------	--	--	---	--	--	--	---	--	--	---	--	--	---

Ignition system

Spark plugs							R						R
-------------	--	--	--	--	--	--	---	--	--	--	--	--	---

Cooling system

Engine coolant level and strength	I	I	I	I	I	I	I	I	I	I	I	I	I
Cooling system for leaks			I				I			I			I
Engine coolant	Replace at first 72,000 km {45,000 miles} or 45 months; after that, every 48,000 km {30,000 miles} or 30 months												

Fuel system

Idle speed			I				I			I			I
Fuel lines and hoses							I*2						I
Fuel filter							R						R
PCV valve*2													I
Emission hoses and tubes													I

Chassis and body

Automatic transaxle fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I
Transaxle oil (MTX and ATX)							R						R
Drive shaft dust boots							I						I
Brake lines and hoses							I						I
Brake and clutch fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I
Brake fluid*3							R						R
Disc brakes (front and rear)			I				I			I			I
Rear drum brakes							I						I
Tire inflation pressure and tire wear	I	I	I	I	I	I	I	I	I	I	I	I	I
Tires			Rt				Rt			Rt			Rt
Power steering fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I
Steering operation and linkages (Includes four wheel alignment)							I						I
Suspension components (front and rear)							I						I
All chassis and body nuts and bolts			I				I			I			I
Exhaust system heat shields							I						I
All locks and hinges	L	L	L	L	L	L	L	L	L	L	L	L	L
Washer fluid level	I	I	I	I	I	I	I	I	I	I	I	I	I
Function of all lights	I	I	I	I	I	I	I	I	I	I	I	I	I

Air conditioner system (if equipped)

Refrigerant			I				I			I			I
Compressor			I				I			I			I