


TRANSAXLE OIL

INSPECTION

1. On level ground, jack up the vehicle and support it evenly on safety stands.
2. Remove the oil level plug and washer.
3. Verify that the oil level is near the lower edge of the plug port.
4. If the oil level is low, add the specified amount and type of oil through the plug port.

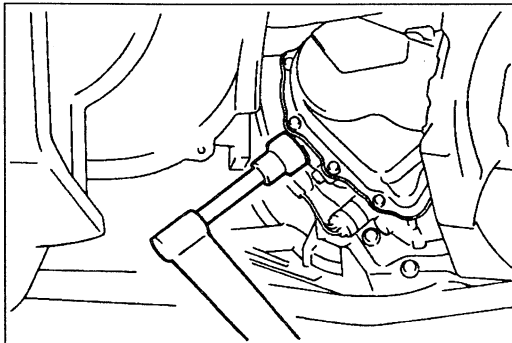

Specified oil

Grade: API service GL-4 or GL-5


Viscosity: All season SAE 75W-90

Above 10°C {50°F} SAE 80W-90

5. Install a new washer and the oil level plug.

Tightening torque:

40—58 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

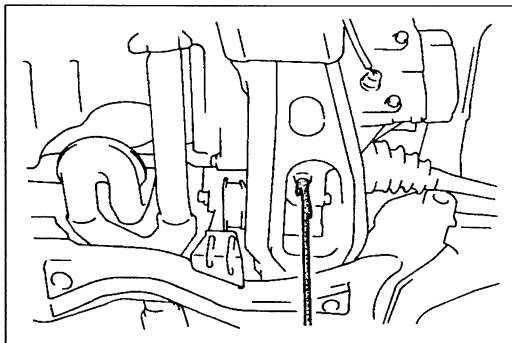


REPLACEMENT

1. On level ground, jack up the vehicle and support it evenly on safety stands.
2. Remove the drain plug and washer.
3. Drain the oil into a suitable container.
4. Install a new washer and the drain plug.

Tightening torque:

40—58 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}

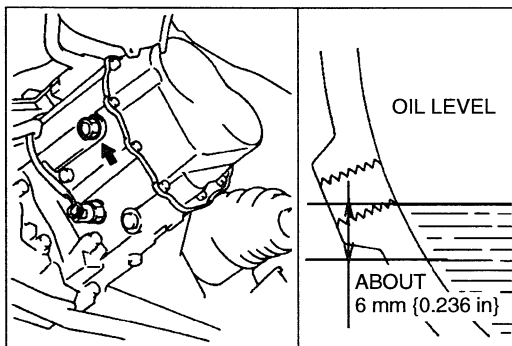

5. Remove the oil level plug and washer. Add the specified amount and type of oil through the plug port until the level reaches the lower edge of the port.

Specified oil

Grade: API service GL-4 or GL-5

Viscosity: All season SAE 75W-90

Above 10°C {50°F} SAE 80W-90

Capacity: 2.7 L {2.9 US qt, 2.4 Imp qt}

6. Install a new washer and the oil level plug.

Tightening torque:

40—58 N·m {4.0—6.0 kgf·m, 29—43 ft·lbf}